


ORIGINAL GARAGE

MOTO

V-ROD Headlight installation guide

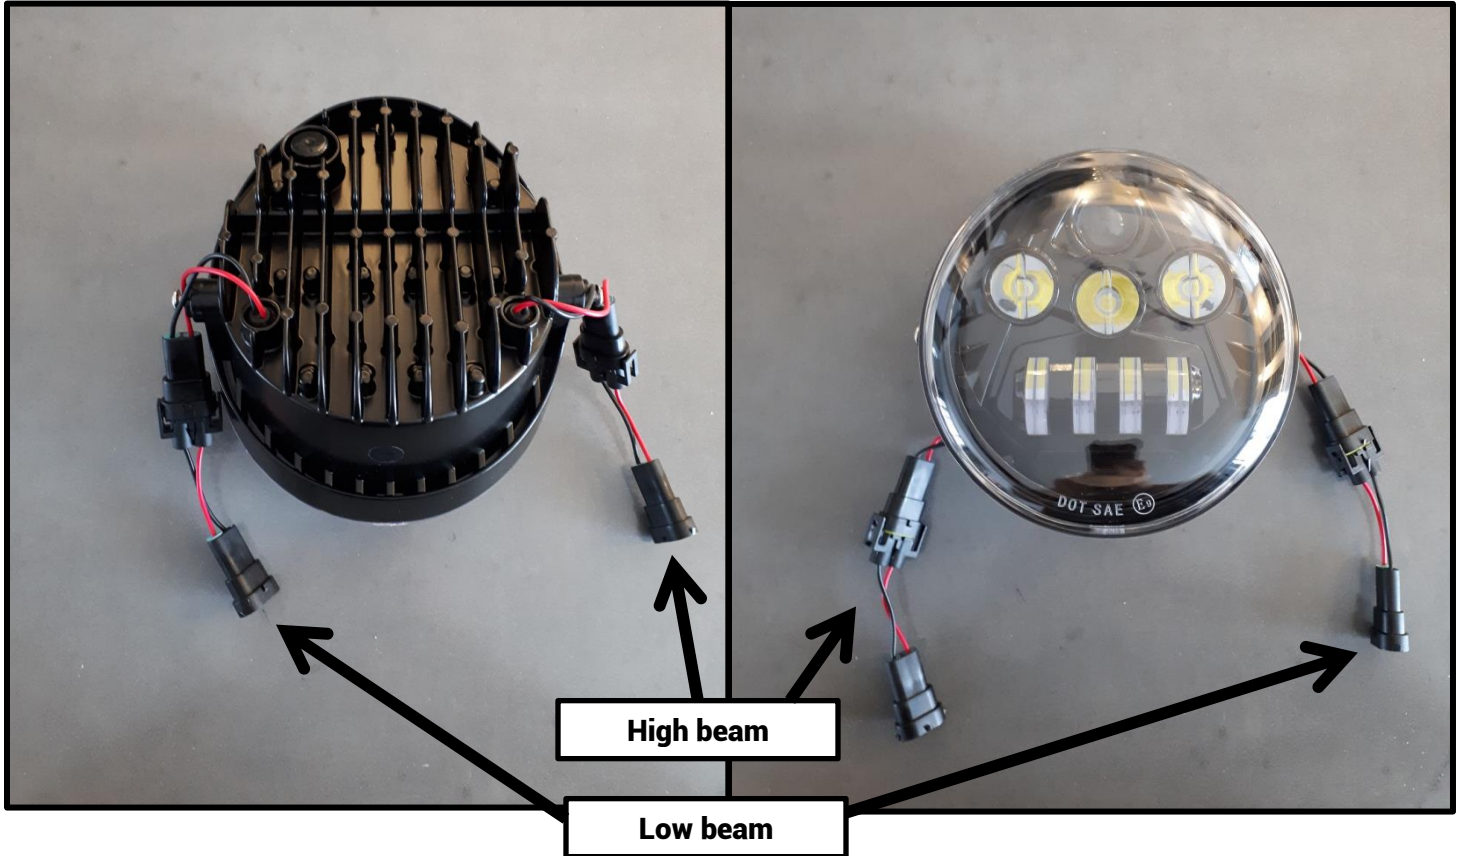

1. Remove stock headlight
2. Keeping the extenders connected, plug the high beam and low beam according to the picture above

*****For V-Rod muscle, the polarity on the High beam harness must be reversed or the fuse will blow*****

*****Some V-Rod model (mostly muscle) may require a lock washer to fill the gap between the LED Headlight and the mount. If that's the case on your bike, use the lock washer provided to fill the gap*****

