



## OG Rear Crash Bar for Harley-Davidson M8 Softail Installation

### Brake side

1. Start by removing the following OEM hardware.
  - #1 & #2 3/8"-16 OEM Screw
  - #3 Plastic plug

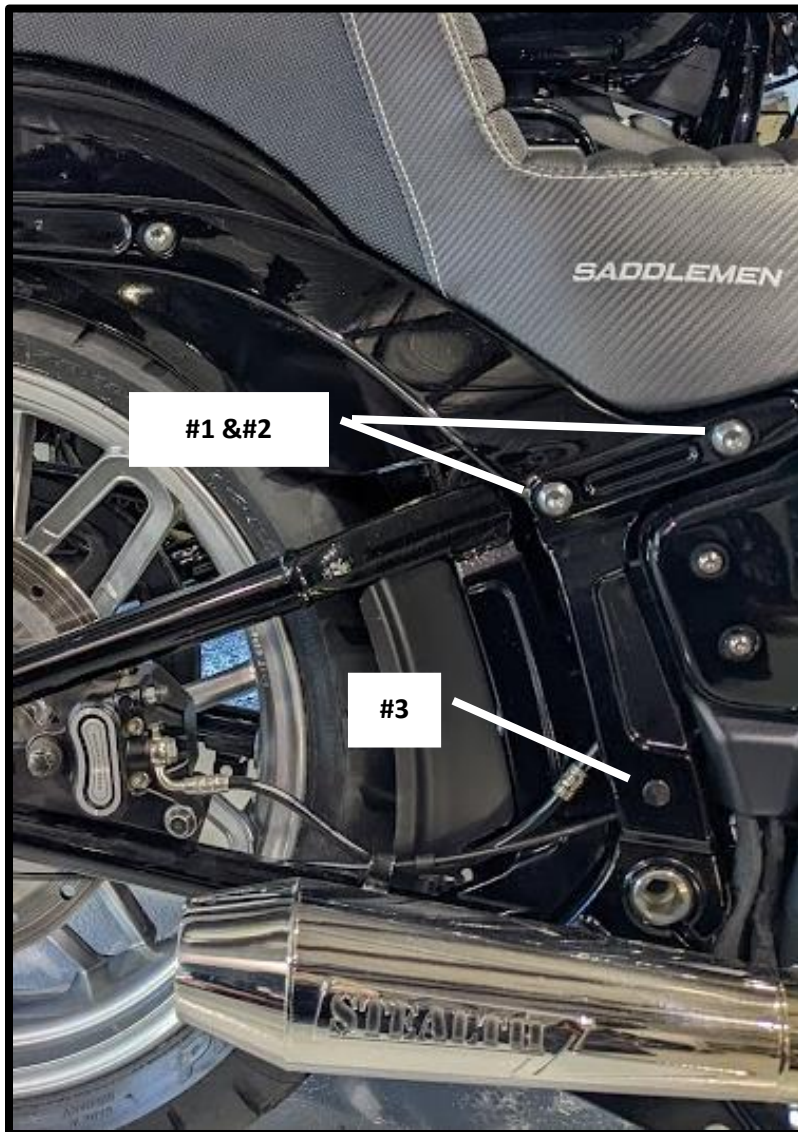


Figure 1

2. Apply small amount of anti-seize on bolts #4 & #5 and mount the brake side OG Rear Crash Bar as shown on **figure 2**. Torque to 25-30 ft-lbs.
  - #4 & #5 SHCS 3/8"-16 x 1 3/4"
  - #6 SHCS 3/8"-16 x 1"

3. If you are using our **OG Ohlins 18+ Softail Shocks External Preload Master Cylinder Mount**, use the provided hardware to mount it as shown on **figure 2**. Torque to 15-20 ft-lbs
- #7, #8 & #9 SHCS 5/16"-18 x 1", washer 5/16" & Nylon lock nut 5/16"-18

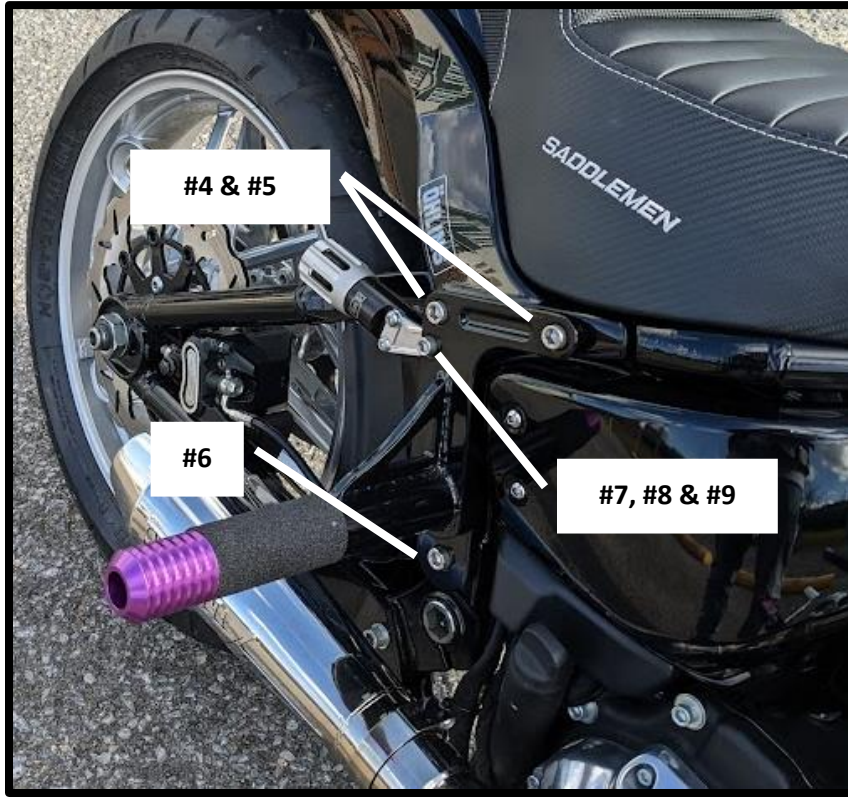


Figure 2

4. If you are **NOT** using our **OG Ohlins 18+ Softail Shocks External Preload Master Cylinder Mount**, use the provided plug to fill the hole as shown on **Figure 3**.
- #10 5/16" hole plug

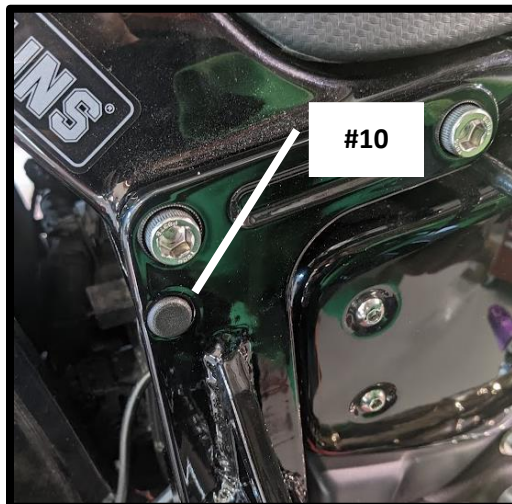


Figure 3

5. Apply small amount of anti-seeze on bolt #11 and mount the slider at the end of the crash bar. Torque to 35-40 ft-lbs.

- #11 SHCS 1/2"-13 x 1 1/4"



Figure 4

**Brake side**

6. Repeat steps 1, 2 & 5 for the clutch side crash bar.